



UniEdge – Make Your Boundaries Stand Out

UniEdge

UniEdge is a surface-mounted, exterior-rated and compact-sized architectural LED edge lighting luminaire that is designed for façade and outdoor decorative lighting applications. The robust mechanical and unique optical designs make UniEdge ideal for edges lighting on windows and doors inner frames, building façades, landmarks and monuments. Available in white, monochromatic colours, RGB, RGBW and tunable white. Unique spread lens with a DMX control option available to give architects and designers the freedom to explore a wide range of concepts and design with no limitations.

Benefits

- Unique Optical Distribution 3x90° to highlight the inner frames or outer edges of windows, balconies or doors.
- Compact Size, Lightweight and Tilttable Brackets.
- Through wiring for power and DMX512 Signal.

Features

- Robust design and IP66 for outdoor use
- Unique 3x90° optical distribution to illuminate architectural edges
- Drainage design to reduce dirt and water accumulation
- Adjustable -5° to +85° tilting angle
- Through wiring for power and DMX data via IP67 connectors

Application

- Bridges, Monuments, Facades
- Landscaping
- Parks and plazas

Warnings and Safety


- For outdoor use only

UniEdge

Versions



Product details

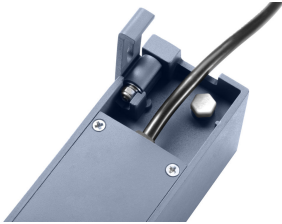

UniEdge Photo

UniEdge Photo



UniEdge Photo



Approval and Application

Mech. impact protection code IK06

General Information

Luminaire light beam spread 3° x 90°

CE mark CE mark

Optical cover/lens type CLFT

Driver included No

Flammability mark F

Light source replaceable No

Light Technical

Standard tilt angle posttop -

Mechanical and Housing

Colour Dark Grey

Application Conditions

Order Code	Full Product Name	Maximum dim level
911401739742	BCP390 3LED RGB 24V 3x90 DMX	13%
911401739752	BCP390 4LED 27K 24V 3x90	-
911401739762	BCP390 4LED 27K 24V 3x90 DMX	13%
911401739772	BCP390 4LED 30K 24V 3x90	-
911401739782	BCP390 4LED 30K 24V 3x90 DMX	13%
911401739792	BCP390 4LED 40K 24V 3x90	-
911401739802	BCP390 4LED 40K 24V 3x90 DMX	13%
911401739812	BCP390 4LED RGBNW 24V 3x90 DMX	13%

Controls and Dimming

Order Code	Full Product Name	Dimmable
911401739742	BCP390 3LED RGB 24V 3x90 DMX	Yes
911401739752	BCP390 4LED 27K 24V 3x90	No
911401739762	BCP390 4LED 27K 24V 3x90 DMX	Yes
911401739772	BCP390 4LED 30K 24V 3x90	No

Order Code	Full Product Name	Dimmable
911401739782	BCP390 4LED 30K 24V 3x90 DMX	Yes
911401739792	BCP390 4LED 40K 24V 3x90	No
911401739802	BCP390 4LED 40K 24V 3x90 DMX	Yes
911401739812	BCP390 4LED RGBNW 24V 3x90 DMX	Yes

General Information

Order Code	Full Product Name	Light source colour
911401739742	BCP390 3LED RGB 24V 3x90 DMX	Red, green and blue
911401739752	BCP390 4LED 27K 24V 3x90	Warm white
911401739762	BCP390 4LED 27K 24V 3x90 DMX	Warm white
911401739772	BCP390 4LED 30K 24V 3x90	Warm white

Order Code	Full Product Name	Light source colour
911401739782	BCP390 4LED 30K 24V 3x90 DMX	Warm white
911401739792	BCP390 4LED 40K 24V 3x90	Neutral white
911401739802	BCP390 4LED 40K 24V 3x90 DMX	Neutral white
911401739812	BCP390 4LED RGBNW 24V 3x90 DMX	Red, green, blue and white

Initial Performance (IEC Compliant)

Order Code	Full Product Name	Init. Corr. Colour Temperature	Init. Colour	
			Rendering Index	Initial luminous flux
911401739742	BCP390 3LED RGB 24V 3x90 DMX	- K	-	67 lm
911401739752	BCP390 4LED 27K 24V 3x90	2700 K	80	118 lm
911401739762	BCP390 4LED 27K 24V 3x90 DMX	2700 K	80	115 lm
911401739772	BCP390 4LED 30K 24V 3x90	3000 K	80	127 lm
911401739782	BCP390 4LED 30K 24V 3x90 DMX	3000 K	80	124 lm

Order Code	Full Product Name	Init. Corr. Colour Temperature	Init. Colour	
			Rendering Index	Initial luminous flux
911401739792	BCP390 4LED 40K 24V 3x90	4000 K	80	144 lm
911401739802	BCP390 4LED 40K 24V 3x90 DMX	4000 K	80	142 lm
911401739812	BCP390 4LED RGBNW 24V 3x90 DMX	- K	-	102 lm

