



ZXP399 DMX Controls and Accessories

ZXP399 Jump 4P DMX cable 2m (10 pcs)

Black

The ZXP399 DMX Controls and Wiring Accessories are to be used with our architectural and facade lighting luminaires (UniFlood C, M and G, UniStrip G4, UniEdge, UniDot G2, UniString and UniBar).;DMX Controls include a main controller, stand-alone controller, sub-controllers, DMX amplifier and DMX addressing device.;Main Controller: Industrial computer that can control up to 6,000 DMX universes.;Stand-alone Controller: Fits all medium applications with up to 700 DMX universes.;Wiring accessories include leader and jump cables with male and female IP67 connectors and end-caps.;Addressing Device: Hand-held device that can write DMX addresses to a whole run on-site within minutes.;DMX Amplifier: Compact, IP65 and low-power repeater that can amplify the DMX signal for up to 100 metres.


Product data

General Information	
Colour	Black
Mechanical and Housing	
Overall length	2000 mm
Dimensions (height x width x depth)	NaN x NaN x 2000 mm (NaN x NaN x 78.7 in)
Product Data	
Full product code	911401742342

Order product name	ZXP399 Jump 4P DMX cable 2m (10 pcs)
Order code	911401742342
SAP numerator – quantity per pack	1
Numerator – packs per outer box	1
Material no. (12 NC)	911401742342
SAP net weight (piece)	2.050 kg

ZXP399 DMX Controls and Accessories

Dimensional drawing

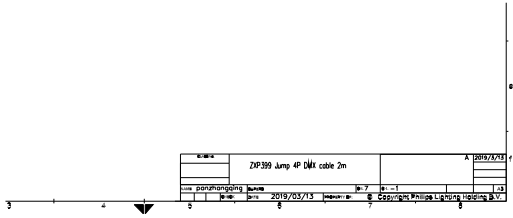

ZXP399

