



# ZXP399 DMX Controls and Accessories

## ZXP399 DMX amplifier 24V 4P

12 to 24 DC V - - Hz - Dust penetration-protected, jet-proof - CE mark

The ZXP399 DMX Controls and Wiring Accessories are to be used with our architectural and facade lighting luminaires (UniFlood C, M and G, UniStrip G4, UniEdge, UniDot G2, UniString and UniBar).;DMX Controls include a main controller, stand-alone controller, sub-controllers, DMX amplifier and DMX addressing device.;Main Controller: Industrial computer that can control up to 6,000 DMX universes.;Stand-alone Controller: Fits all medium applications with up to 700 DMX universes.;Wiring accessories include leader and jump cables with male and female IP67 connectors and end-caps.;Addressing Device: Hand-held device that can write DMX addresses to a whole run on-site within minutes.;DMX Amplifier: Compact, IP65 and low-power repeater that can amplify the DMX signal for up 100 metres.

### Product data

| General Information      |               |
|--------------------------|---------------|
| CE mark                  | CE mark       |
| Colour                   | Black         |
| Operating and Electrical |               |
| Input voltage            | 12 to 24 DC V |
| Input frequency          | - Hz          |

| Mechanical and Housing              |                                     |
|-------------------------------------|-------------------------------------|
| Overall length                      | 136.4 mm                            |
| Overall width                       | 40 mm                               |
| Overall height                      | 25.2 mm                             |
| Dimensions (height x width x depth) | 25 x 40 x 136 mm (1 x 1.6 x 5.4 in) |

## ZXP399 DMX Controls and Accessories

### Approval and Application

Ingress protection code IP65 [ Dust penetration-protected, jet-proof]


### Product Data

Full product code 911401756682  
Order product name ZXP399 DMX amplifier 24V 4P  
Order code 911401756682

Numerator – quantity per pack 1  
Numerator – packs per outer box 12  
Material no. (12NC) 911401756682  
Net weight (piece) 0.149 kg

IP65

### Dimensional drawing

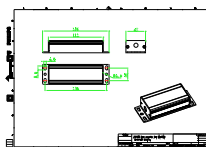

ZXP399

